

# **Ultra-Low-Power CO<sub>2</sub> Sensors Enable Wireless Remote Monitoring for Building Management Solutions and IoT Connectivity**

## TABLE OF CONTENTS

TABLE OF CONTENTS.....	2
WHAT IS THE PROBLEM THAT NEEDS TO BE SOLVED? .....	3
WHAT ARE THE REQUIREMENTS FOR THE CO2 SENSOR? .....	3
HOW IS THIS ENABLED? .....	4
INTRODUCING THE COZIR®-BLINK .....	6
CONCLUSION .....	8
REFERENCES.....	8
IMPORTANT NOTICE .....	9
ADDRESS.....	9

## WHAT IS THE PROBLEM THAT NEEDS TO BE SOLVED?

Building management systems (BMS), Demand-Controlled Ventilation (DCV) systems and Indoor Air Quality (IAQ) equipment often require installation of wirelessly-connected, battery-powered CO<sub>2</sub> sensor devices in environments where mains power is not easily accessible or where its provision is not economically viable; such as with building technology upgrades and retrofitting.

The requirement to measure air quality is being driven by two key factors, legislation, and economics. Many countries have either set or are in the process of setting maximum allowable levels of CO<sub>2</sub> in School Classrooms, Hospitals, Public Buildings, Hotels and in the workplace. For example, the US Occupational Safety and Health Administration (OSHA)<sup>1</sup> has set a Permissible Exposure Limit (PEL) for CO<sub>2</sub> of 5,000 parts per million (ppm) (or 0.5 %) over an 8-hour workday. They report that exposure to levels of CO<sub>2</sub> above this can cause problems with concentration, an increased heart rate, breathing issues, headaches, and dizziness.

Changing the air in a building to regulate CO<sub>2</sub> levels has an energy cost - especially if the incoming air also has to be heated or cooled. This is particularly relevant at night-time and weekends when buildings may not be fully occupied. DCV or IAQ equipment are increasingly incorporating CO<sub>2</sub> monitors so that the air change is controlled by the need to reduce the CO<sub>2</sub> levels.


## WHAT ARE THE REQUIREMENTS FOR THE CO<sub>2</sub> SENSOR?

CO<sub>2</sub> monitoring systems often need to be installed in locations where access to mains power is limited, or its provision is costly. The ability to be able to power the CO<sub>2</sub> sensor for long periods of time from a battery or from energy generated using harvesting techniques is highly desirable. To reduce maintenance costs, users want the ability for the CO<sub>2</sub> sensor to operate autonomously for up to 10 years without user intervention.

Energy harvesting is a technique used to collect very small amounts of ambient energy to power wireless devices. Assuming the power consumption of the CO<sub>2</sub> sensor and wireless network interface is low enough, ambient energy present in the environment can be sufficient to power remote monitoring equipment with an almost unlimited lifetime.


**HOW IS THIS ENABLED?**

A wireless CO<sub>2</sub> sensor suitable for use in IAQ systems consists of four major building blocks, a CO<sub>2</sub> sensor, microcontroller, low power radio module and a power source.

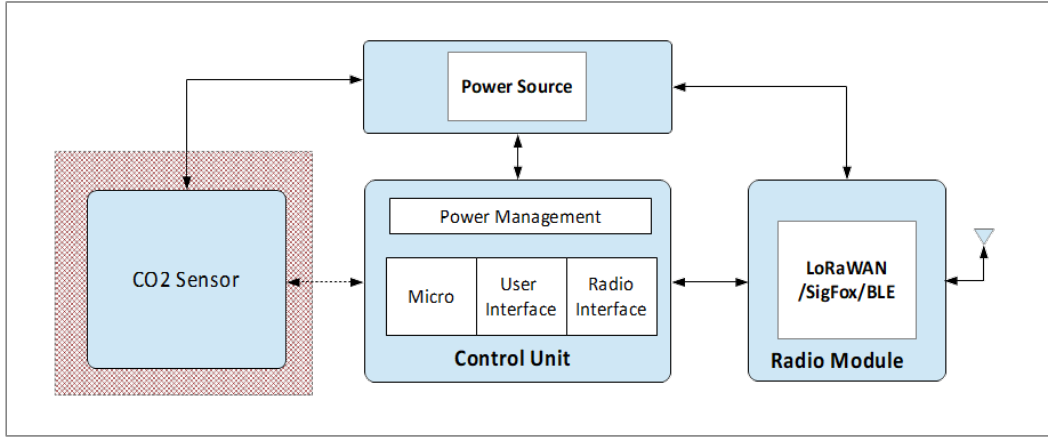


Conventional CO<sub>2</sub> sensors work by illuminating the gas using a filtered incandescent light source and measuring the absorption using a light detector. However, the power consumed using this type of CO<sub>2</sub> sensor is too high to make it usable in a portable, or low power application. The cost of facilities management required to frequently change batteries is impractical and too expensive.

Regardless of the source of illumination, measurement of the CO<sub>2</sub> level is determined using the Beer-Lambert law<sup>2</sup>. Beer-Lambert's law states that the loss of light intensity when it propagates in a medium is directly proportional to intensity and path length. CO<sub>2</sub> molecules absorb infrared radiation at a wavelength of around 4.25 microns.

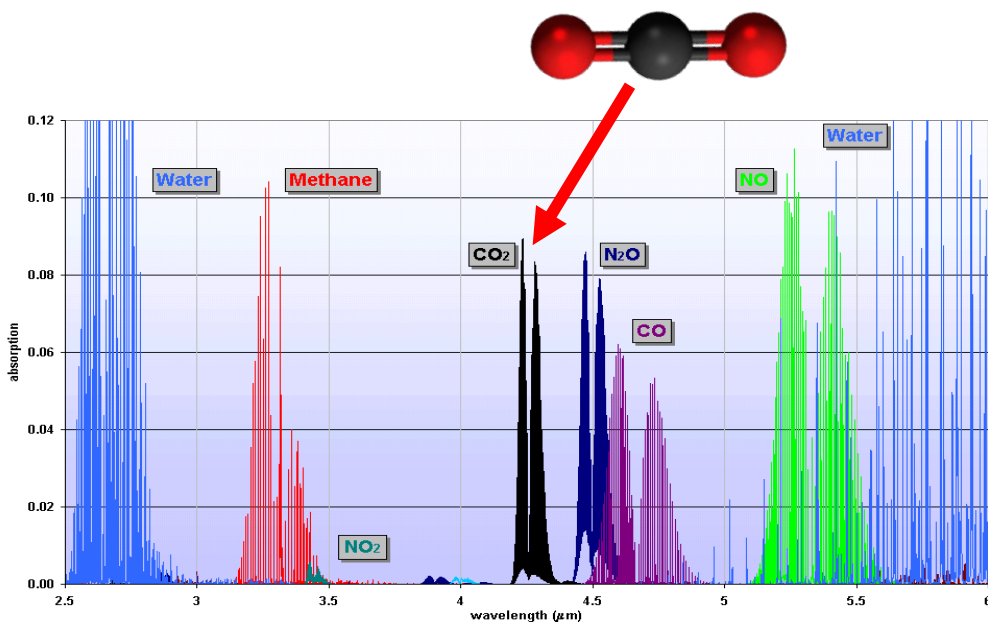

Gas Sensing Solutions' CO<sub>2</sub> sensor uses a solid state, ultra-low power LED light source. This type of light source has a number of advantages, particularly for low power applications. The CO<sub>2</sub> gas is strongly absorbed by mid-IR 4.25um light. GSS manufactures its own LEDs, which have been specifically designed to emit a narrowband of light centred at 4.25um. This means little or no energy is consumed generating light of wavelengths that are unused. This is very different from a typical incandescent light source, which is intrinsically inefficient as it generates broadband light, most of which is wasted.


Solid state sensors such as those from GSS also have a much longer lifetime, typically measured in years, which along with the long run time dramatically reduce lifetime maintenance costs.

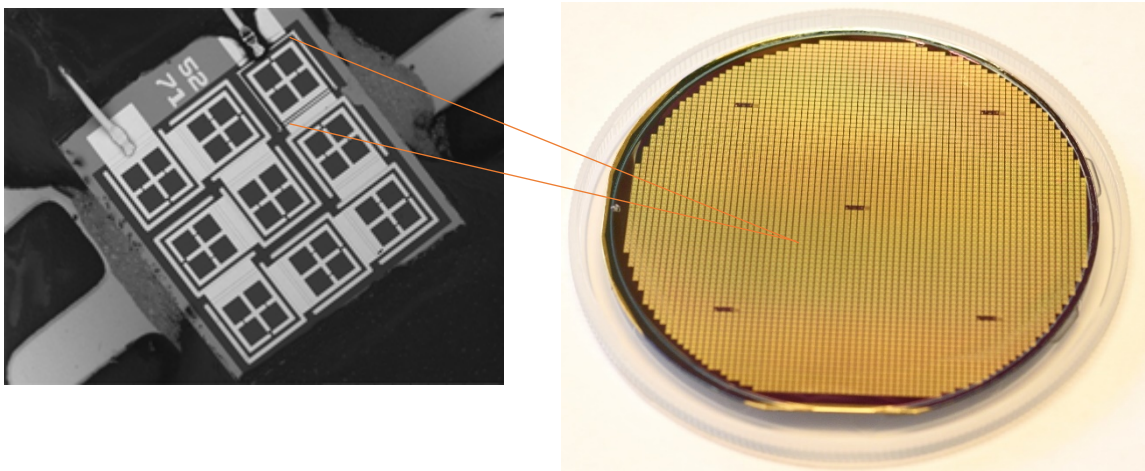

GSS's ultra-efficient LED light source can also be switched on and off rapidly, much faster than conventional incandescent sources. The GSS LEDs can switch on and become usable for CO<sub>2</sub> measurement within seconds. This enables the user to take readings quickly before shutting down the module, thus minimising overall power consumption.

## INTRODUCING THE COZIR®-BLINK


GSS has recently designed a new ultra-low power CO<sub>2</sub> sensor module specifically for low power applications. The module consists of four major functions, a mid-IR LED, a photo-diode, an optical light path and a microcontroller.

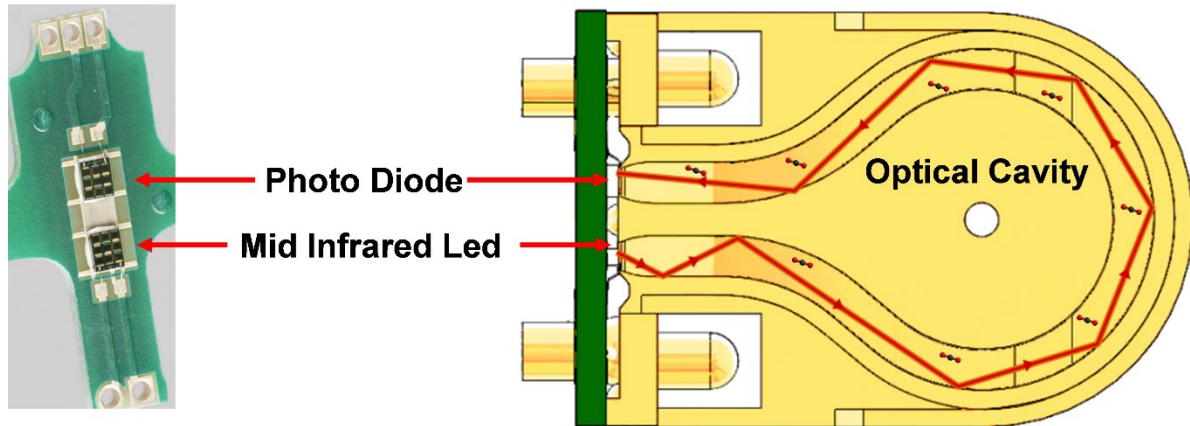

Light from the LED is injected into the optical cavity, which contains the CO<sub>2</sub> gas that has been allowed to enter it through a hole on the top surface. The light that passes through the optical cavity is detected by the photo diode. The signal from the photo diode is digitised by the microcontroller and compared with a reference level stored in memory. The microcontroller can then calculate the level of CO<sub>2</sub> in the optical cavity.


The introduction of the CozIR®-Blink allows users to reduce power consumption of the CO<sub>2</sub> measurement to unprecedented levels. The CozIR®-Blink is designed for ultra-low power applications where power is often at a premium. CozIR®-Blink is designed to be power cycled.

When the sensor is switched on, a measurement is automatically initiated. Data can be read out once the READY pin is pulsed high, approximately 3.3s after application of power. The sensor can then be subsequently switched off, saving power.

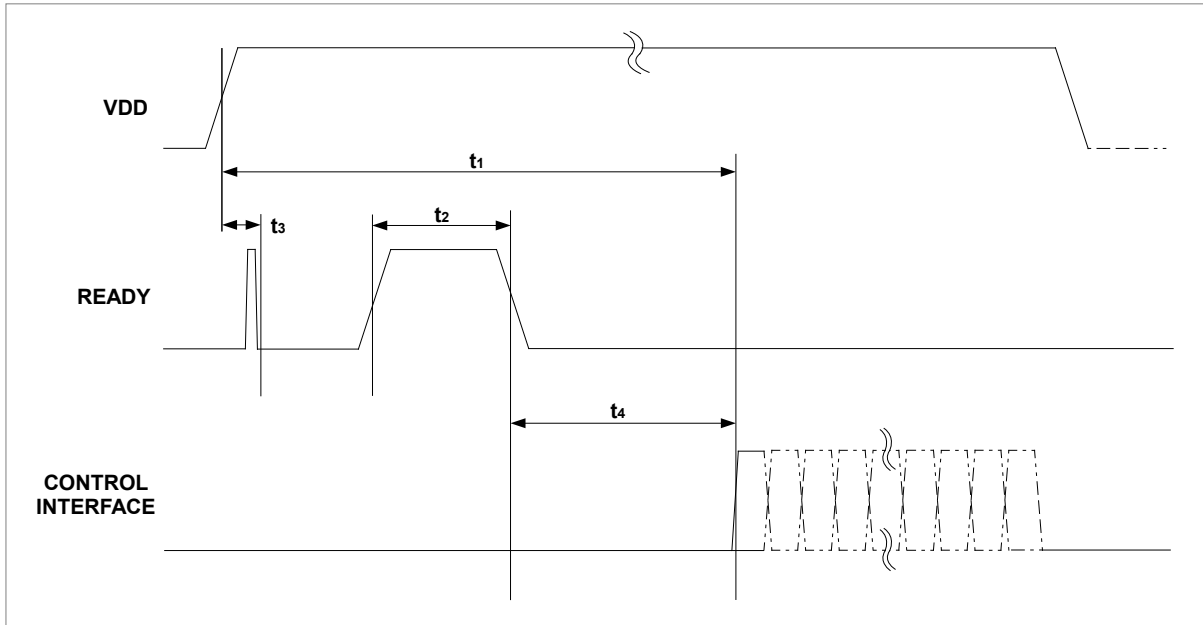

PARAMETER	SYMBOL	MIN	TYP	MAX	UNIT
READY Data Valid from Power On	t <sub>1</sub>	0.3	3.3		s
READY High Pulse-Width	t <sub>2</sub>		16.5		ms
READY Low from Power On	t <sub>3</sub>			100	ms
Control Interface Setup Time	t <sub>4</sub>	600			ns

The sensor interfaces to the host controller using a UART or I<sup>2</sup>C interface. In its simplest form, the sensor is accessed by the I<sup>2</sup>C Master requesting data from the sensor once the READY pin is pulsed high. The Master selects the CozIR<sup>®</sup>-Blink and reads out data in 2 bytes from the appropriate register. The data is in binary format.

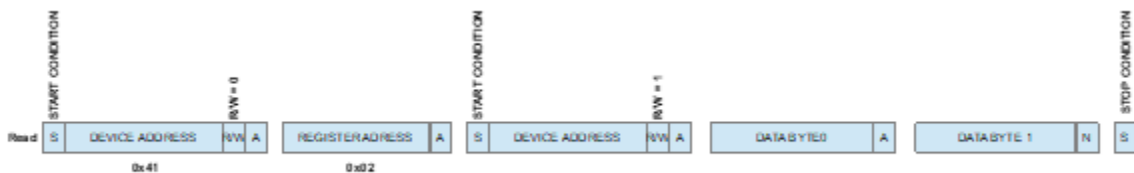

Switching the CozIR<sup>®</sup>-Blink sensor off allows the user to reduce power consumption to close to zero when not taking measurements. The user can optimise the active power consumption of the CO<sub>2</sub> module by varying the power-on time, the measurement duration and measurement cycle time.

Power consumption of the CozIR®-Blink module is defined by the following equation.

$$\text{Power } (\mu\text{W}) = \frac{1.5625 * \text{number of pulses per reading}}{\text{Measurement period in Seconds}} * 1000$$

In a typical application such as HVAC where the user might want to take a reading every minute, the power requirement can be as low as 417uW per reading for the CozIR®-Blink. Power consumption can be reduced even further by setting the unit to reduce measurement accuracy, or by increasing the measurement interval.

The CozIR®-Blink has been designed to run autonomously and requires no in-use adjustment over the lifetime of the sensor. The sensor is calibrated before shipping with a 400ppm zero point. During use, the sensor can be programmed to automatically re-zero with a duty cycle defined by the user. This ensures the sensor can operate optimally over the lifetime of the product. Accuracy is further improved by allowing the user to configure the sensor for the effects of altitude.

The CozIR®-Blink automatically starts a measurement sequence when power is applied to the module. The sensor module flags that a CO<sub>2</sub> measurement is available and is designed to be powered down after the measurement is read out.

## CONCLUSION

GSS's new CozIR®-Blink has been designed specifically to address applications that require measurement of CO<sub>2</sub> combining very low power consumption with high accuracy. This ultra-low power CO<sub>2</sub> sensor can be powered from a small battery, solar panel or other energy harvesting device, with enough power left over for a wireless data and control connection. This makes it ideal to address the emerging requirements for low cost distributed building management systems (BMS), Demand-Controlled Ventilation (DCV) and Indoor Air Quality (IAQ) systems.

To learn more about how the CozIR®-Blink can save your application on power consumption, visit our website today. <https://www.gassensing.co.uk/product/cozir-blink/>

## REFERENCES

1. United States Department of Labour. (n.d.). *Permissible Exposure Limits / OSHA Annotated Table Z-1*. Retrieved from Occupational Safety and Health Administration: <https://www.osha.gov/dsg/annotated-pels/tablez-1.html>
2. chemguide. (n.d.). *THE BEER-LAMBERT LAW*. Retrieved from chemguid: <https://www.chemguide.co.uk/analysis/uvvisible/beerlambert.html>



## IMPORTANT NOTICE

Gas Sensing Solutions Ltd. (GSS) products and services are sold subject to GSS's terms and conditions of sale, delivery and payment supplied at the time of order acknowledgement. GSS warrants performance of its products to the specifications in effect at the date of shipment. GSS reserves the right to make changes to its products and specifications or to discontinue any product or service without notice.

Customers should therefore obtain the latest version of relevant information from GSS to verify that the information is current. Testing and other quality control techniques are utilised to the extent GSS deems necessary to support its warranty. Specific testing of all parameters of each device is not necessarily performed unless required by law or regulation. In order to minimise risks associated with customer applications, the customer must use adequate design and operating safeguards to minimise inherent or procedural hazards. GSS is not liable for applications assistance or customer product design. The customer is solely responsible for its selection and use of GSS products. GSS is not liable for such selection or use nor for use of any circuitry other than circuitry entirely embodied in a GSS product.

GSS products are not intended for use in life support systems, appliances, nuclear systems or systems where malfunction can reasonably be expected to result in personal injury, death or severe property or environmental damage. Any use of products by the customer for such purposes is at the customer's own risk.

GSS does not grant any licence (express or implied) under any patent right, copyright, mask work right or other intellectual property right of GSS covering or relating to any combination, machine, or process in which its products or services might be or are used. Any provision or publication of any third party's products or services does not constitute GSS's approval, licence, warranty or endorsement thereof. Any third party trademarks contained in this document belong to the respective third-party owner.

Reproduction of information from GSS datasheets is permissible only if reproduction is without alteration and is accompanied by all associated copyright, proprietary and other notices (including this notice) and conditions. GSS is not liable for any unauthorised alteration of such information or for any reliance placed thereon.

Any representations made, warranties given, and/or liabilities accepted by any person which differ from those contained in this datasheet or in GSS's standard terms and conditions of sale, delivery and payment are made, given and/or accepted at that person's own risk. GSS is not liable for any such representations, warranties or liabilities or for any reliance placed thereon by any person.

## ADDRESS

Gas Sensing Solutions Ltd.  
Grayshill Road  
Cumbernauld  
G68 9HQ  
United Kingdom